


KODASLIDE DIAL-LITE VIEWER

(MODEL A)

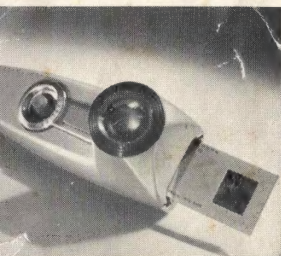

T. M. Reg. U. S. Pat. Off.

- 1** PLUG the cord into a 105-120-volt outlet.
- 2** INSERT a 2 x 2-inch slide into top of the viewer with the picture upright and the plain side of the cardboard toward you.
- 3** DEPRESS the SWITCH.
- 4** HOLD your eye close to the LENS; then focus by rotating it until the picture appears sharp.
- 5** ADJUST the brightness by turning the BRIGHTNESS CONTROL knob.
- 6** FOR STEREO slides ($1\frac{5}{8}$ x 4 inches), insert the STEREO SLIDE ADAPTER into the viewer as illustrated. This permits viewing one half of the stereo slide. When looking at stereo slides, hold the viewer in a horizontal position.

If the lamp burns out, purchase a 6-watt, 100-volt, S6 clear, candelabra-screw-base lamp from your photo dealer. To replace the lamp, unplug the cord, remove the two coin-slotted screws from the back of the viewer; then change the lamp. When replacing the back, be sure the longer of the two coin-slotted screws is placed in the upper hole.

EASTMAN KODAK COMPANY, Rochester 4, N. Y.